

## AQUAFALSE



Non binding picture

### Composition

- 1 false start pad
- 1 fixing unit
- 1 connection cable
- Installation and operating instructions

### Technical description

- Use :** Indoor or outdoor
- Dimensions :** 500 x 500 x 20 mm
- Material :** stainless steel, anti-slip top surface
- Weight :** 8 kg
- Transmission cabling :** 1,5 m between the false start pad and the electronic interface
- Gauging :** torque adjustment screw
- Installation:** with supplied retaining straps or screwed directly on the start block when the top has been removed  
(technical data of the start block required to determine the anchor points)

This pad is mounted on top of the existing start block (screwed). The SWR2 has a special surface which is indestructible and prevent from sliding. This pad must be adapted to the existing block.

### Functions

- Detection :** swimmer's start detection when the false start pad is moving back on the sensor (located at the back of the pad)

